

Updates

New versions: **805BS-B-19** and **805TS-B-19A**, **805TS-B-19B**

Application and function are the same.

Important difference: Power Adaptor changes

805BS

805BS-B-17	805BS-B-19
	
One piece. 2 pin wall adaptor, single power cord from wall socket to indicator.	Two pieces. 1st piece from 3 pin wall socket to adaptor, 2nd piece from adaptor to indicator.
Part number : 805BS-TRANS-17	Part Number: 805BS-TRANS-19 (comes with both pieces)
Transformers are interchangeable	

805TS, Versions using External Transformers

805TS-B-17 Part Number: 805TS-TRANS-17	805TS-B-19A Part Number: 805TS-TRANS-19A (comes with both pieces)
One piece. 2 pin wall adaptor, single power cord from wall socket to indicator.	Two pieces. 1st piece from 3 pin wall socket to adaptor, 2nd piece from adaptor to indicator.
	
Transformers are interchangeable if no preference to 1-piece or two-piece	

Transformers are interchangeable if no preference to 1-piece or two-piece

805TS, Versions using Internal Transformer

805TS-B-19B	Part Number: 805TS-TRANS-IN-19 (comes with both pieces; the cord and the transformer)	3 pin wall adaptor, single power cord from wall socket to indicator, since transformer is internal.	805TS-TRANS-IN-19  
--------------------	--	---	--

805TS-TRANS-IN:

old parts, different output than 805TS-TRANS-IN-19, can **NOT** be used for 805TS-B-19B. The **transformer only**, the cord NOT included. (p/n for the cord: 805TS-CORD-IN).

